



ONIGOE-mini Manual

Ver. 1.4


※The specification and manual of this product can be change without notice.

1. Precaution


- Power source
Please use AA battery.
- Handling
Do not drop, shock or vibrate the device.
It may damage device.
- Dismantling
Do not dismantle the product. We will not be responsible on damage caused by dismantling the product.

2. Content of the box

- Control box 1

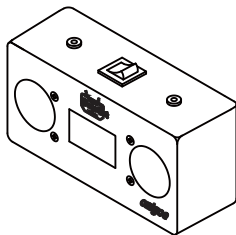


- Touch switch button 2

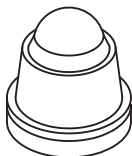

- Cable (3m) 2

3. Preparation (Connecting the parts)

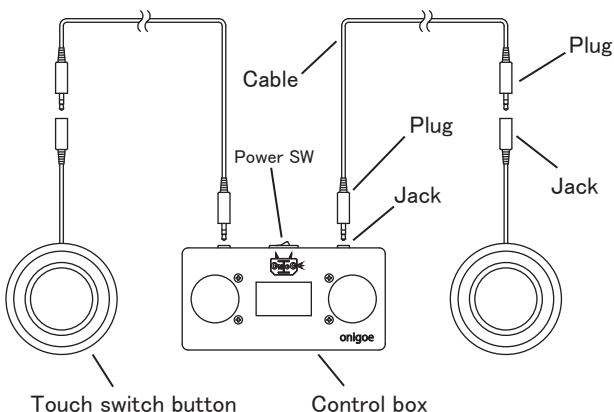

Please connect as shown in the figure above.
Each plug Please insert to the last jack.

4. How to use

- Switch on
- All indicator lights will turn-on, touch 1 of the touch switch button to begin.
Training begin after 3 sec.
- Display -AVERAGE TIME
- Restart touch 1 of the touch switch button to begin Training. The number of times of touch is 10 times.

※Option

- 1) Hold down the left touch button and turn on the power. Then, please release your hand from the touch button.

Option 1 (FS mode) works.

For practice start, please press either touch button. Practice will start 3 seconds later.

The number of times of touch is 10 times.

- 2) Hold the touch button on the right side and turn on the power. Then, please release your hand from the touch button.

Option 2 (JF mode) works.

For practice start, please press either touch button. Practice will start 3 seconds later. The number of times of touch is 10 times.

- 3) Hold down both touch buttons and turn on the power. Then, please release your hand from the touch button.

Option 3 (Demonstration mode) works.

To practice, please press the left touch button twice. Practice will start. Practice stop, please press either touch button. To start re-practice, please press one of the touch buttons.

This mode has no time measurement function.

5. Specification

- Power source 4 AA size battery
- Dimension
Control box 170X85X60mm
Touch switch button 93X93X92mm
- Weight
Control box 290g
Touch switch button 85g